




BATTER LOG B1 Adjacent to TP3

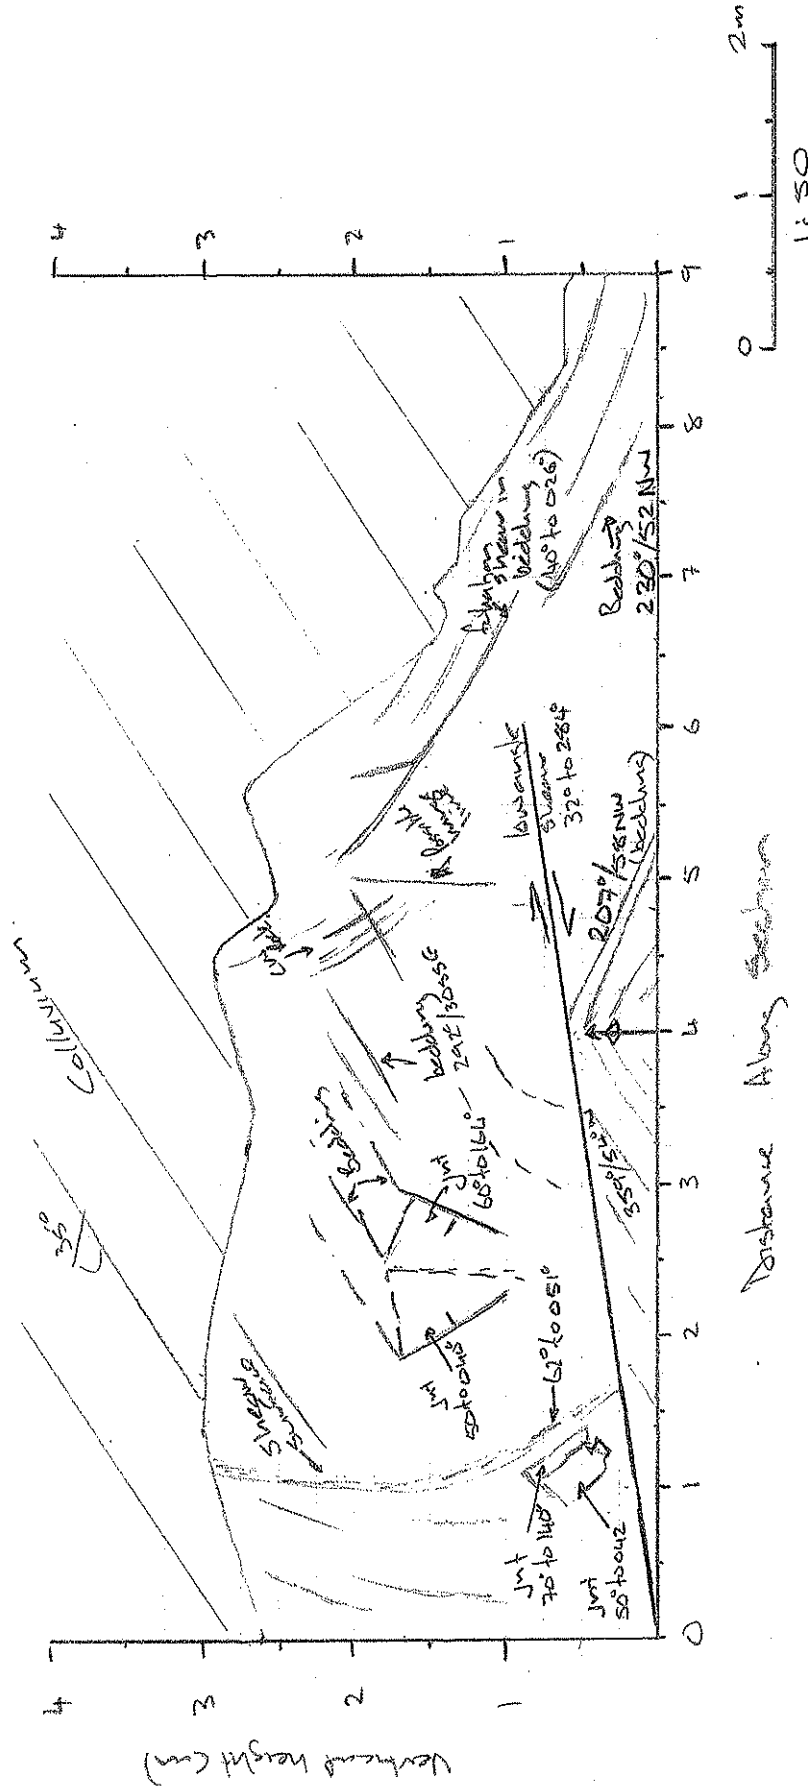

Notes:

Scan line orientation 036°

57° to 051° = dip/dip dir.

105°/50NW = strike x dip of bedding